




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Demo/Dimmer		Media
	On/Off Timer		AV
	Timer/Clock		Shift + AV
	DVD		Blue
	Tuner		Yellow
	Port		Green
	AUX		Red
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8







 

 

 
 





 

 

 
 

 

 

 


Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	CD Ripping		Guide
	Cancel		Pre Ch
	I<<		I<<
	Step		3D
	Pause		Pause
	>>I		>>I
	<<		<<
	Stop		Stop
	Play		Play
	>>		>>
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Audio		Dual
	Tuning Up		Ch +





Originalfernbedienung Ersatzfernbedienung

	Tuning Down		Ch -
	Menu		Menu
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Repeat		Text
	A-B Repeat		TV/R
	Tuner Memory		Rec
	Subtitle		Subt
	DSP/EQ		D. Menu
	P.Bass		Shift + Subt
	P.Sound		Format

Originalfernbedienung Ersatzfernbedienung

	Echo		Shift + TV/R
	Sleep		Sleep
	Slow		List
	Angle		Options
	Mic Vol+		Shift + Vol +
	Mic Vol-		Shift + Vol -
	Remain		Smart
	Zoom		Shift + Eject
	Mo/ST		Shift + Options

