
 






Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off		Shift + Power
	CD		3
	MP		8
	Tuner		6
	Discphono		1
	Tape 1		2
	Tape 2		5
	AUX		7
	Video		4
	Info		Info / Angle
	Sleep		Sleep / Timer
	Scan Tune >>		>> / Tune+
	Mute		Mute / Dimmer
	Vol+		Vol+
	<< Scan Tune		<< / Tune-
	DIM		Shift + Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	SPK A/CD		CH+ / Page+
	Up		Up
	SPK B/USB		CH- / Page-
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Tone DFT/OPT		Setup / OPT /
	I<< Preset		I<< / Preset-
	Play/AM/FM/DB		Play / Slow
	Preset >>I		>>I / Preset+
	Red/Rand/Tuner		Red / Netflix / Search
	Green/RPT/Blen		Green / APP / Repeat
	Yellow/Prog/Memo		Yellow / YouTube / Repeat
	Blue/Clear/Delete		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disp		Display / Media
	0		0
	+10		Guide / EPG / -/--
	>>		>> / Tune+
	Mute		Mute / Dimmer
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	DIM		Shift + Mute / Dimmer
	Vol-		Vol-
	SPK A / CD		CH+ / Page+
	Up		Up
	SPK B / USB		CH- / Page-
	Left		Left
	Enter		OK
	Right		Right
	Menu / SRC		D.Menu / Top
	Down		Down
	Tone DFT / OPT		Setup / OPT /
	Open/Close/Autot		Eject / Surround
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	Play		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	>>		>> / Preset+
	Red/Rand/Tuner		Red / Netflix / Search
	Green/RPT/Blen		Green / APP / Repeat
	Yellow/Prog/Memo		Yellow / YouTube / Repeat
	Blue/Clear/Delete		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off		Shift + Power
	Disp/Info		Info / Angle
	Mute		Mute / Dimmer
	Vol+		Vol+
	DIM		Shift + Mute / Dimmer
	Vol-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu/SRC		Menu / Home
	Down		Down
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	I<<<		I<<< / Preset-
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	>>>I		>>>I / Preset+
	Red/Rand/Tuner		Red / Netflix / Search
	Green/RPT/Blen		Green / APP / Repeat


 



 


 
 

 

 


 

 

 




Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disp/Info		Info / Angle
	0		0
	Tune Scan >>		>> / Tune+
	Mute		Mute / Dimmer
	Vol+		Vol+
	<< Scan Tune		<< / Tune-

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	I<< Preset		I<< / Preset-
	Play/AM/FM/DB		Play / Slow
	Preset >>I		>>I / Preset+
	Red/Rand/Tuner		Red / Netflix / Search
	Green/RPT/Blen		Green / APP / Repeat
	Yellow/Prog/Memo		Yellow / YouTube / Repeat
	Blue/Clear/Delete		Blue / Prime Video / Random

