



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Play		Play
	[≡]		Text
	Pause/[ /≡]		Pause
	Stop/[≡+]		Stop
	Rec/[≡◆]		Rec
	<</[≡0]		<<
	<</[≡ ]		<<
	>> /[≡?]		>>
	>>/[≡x]		>>
	ANT		Subt
	Tools		Options
	1		1
	2		2
	3		3
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Back		Back
	Home/Source		Smart
	Home/Source		AV
	Vol+		Vol +



