




 
 





 
 




Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	?		Setup / OPT /
	Power		Power
	Format		Picture / Format
	Radio		TV/Radio /
	Mute / Edit		Mute / Dimmer
	Rec		Rec / Rec Mode
	> <		Zoom / Size
	Stop		Stop / Hold
	I<		I<< / Preset-
	Play / Pause		Play / Slow
	>		>> / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Apps		Shift + Green / APP /
	List		Smart / List
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	i+		Info / Angle
	Back		Back / Return
	Red / A-Z		Red / Netflix / Search
	Green / Lang		Audio / Lang I/II
	Green / Lang		Green / APP / Repeat
	Yellow / S.Title		Yellow / YouTube / Repeat
	Blue / A.Focus		Blue / Prime Video / Random
	Vol +		Vol+
	Media		Display / Media
	CH + / Page +		CH+ / Page+
	Vol -		Vol-
	Guide		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

CH -	CH - / Page -	CH PAGE	CH- / Page-
1	1	1	1
2 abc	2	DVD 2	2
3 def	3	CD - STB 3	3
4 ghi	4	VIDEO 4	4
5 jkl	5	TAPE 5	5
6 mno	6	TUNER 6	6
7 pqrs	7	AUX - HDD 7	7
8 tuv	8	USB 8	8
9 wxyz	9	BLUETOOTH 9	9
TIMER DEL	Timer / DEL	TIMER SLEEP	Sleep / Timer
0	0	HDMI - BAT 0	0
MENU	Menu	HOME MENU	Menu / Home

Originalfernbedienung Ersatzfernbedienung

