






 
 
 
 

 

 
 
 

 






 
 

 


 


 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Play	
Reveal		Pause	
Txt Stop		Stop	
Info	 +  Shift + Info	Shift + Info	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung Ersatzfernbedienung







 


 
 

 
 
 



8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Audio-		Shift + Play
Audio+		Shift + Pause
Tone-		l<<
Tone+		Shift + >>l
On/Tim		Shift + Subt
Off/Tim		Shift + Sleep
Disp		List
Color+ P.Std		>>

Originalfernbedienung Ersatzfernbedienung


 





 
 
 







Mix Scan		Shift + TV/R
Tune-		Shift + Left
Aft/Caf		Shift + Ok
Tune+		Shift + Right
Bright- Sys		Shift + Exit
Contrast+		Shift + Ch +
Color- S.Std		<<
Contrast-		Shift + Ch -
3.*		Shift + Guide
4.# 16:9		Format
Surround		Shift + Red
Nicam/Mono		Shift + Green
Level L		Shift + Yellow
Level R/Woofer		Shift + Blue



Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute
Reveal		Pause
Txt Stop		Stop
Info	 + 	Shift + Info
Subt.List		Subt
Sleep Timer		Sleep
Return TV		TV/R
Menu video		D. Menu
Text		Text
Txt Expand		Eject
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok
Menu Right		Right

Originalfernbedienung Ersatzfernbedienung

Menu Down		Down
Back		Back
Volume+		Vol +
Chan.Up		Ch +
Volume-		Vol -
Menu audio		Dual
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide



