








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Menu		Menu
	Recall		Back
	Exit		Exit
	TV/R		TV/R

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	EPG		Guide
	Vol+		Vol +
	Vol-		Vol -
	Audio		Dual
	Subtitle		Subt
	Text		Text
	Rec		Rec
	Pause		Pause
	<<		<<





Originalfernbedienung Ersatzfernbedienung

	>>		>>
	Stop		Stop
	Rec List		List
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

