

 

 



 

 

 
 

 


 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV		Smart
	SAT		Media
	Audio		Dual
	Menu		Menu
	[...]		Subt
	i		Info
	EPG		Guide
	Exit		Exit
	CH+		Ch +
	Up		Up
	CH-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Freeze		Pause
	Page+		>>
	Page-		<<
	Back		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡]		Text





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	White		Sleep				
	Red		Red				
	Tv/Rad		TV/R				
	FAV		Pre Ch				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

