




 





 







 
 





 





Originalfernbedienung Ersatzfernbedienung

	Main Menu		Menu
	Power		Power
	Rec		Rec
	Pause		Pause
	Stop		Stop
	<<		<<
	Play		Play
	>>		>>
	↶		I<<
	↷		>>I
	Guide		Guide
	LIB		Media
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	SUB		Subt
	Text		Text
	i		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Page +		Shift + Ch +
	Page -		Shift + Ch -
	CH +		Ch +
	CH -		Ch -
	Mute		Mute
	TV / Radio		TV/R
	1		1
	2		2
	3		3





Originalfernbedienung    Ersatzfernbedienung

ghi 4	4	<b>4</b>	4
jkl 5	5	<b>5</b>	5
mno 6	6	<b>6</b>	6
pqrs 7	7	<b>7</b>	7
tuv 8	8	<b>8</b>	8
wxyz 9	9	<b>9</b>	9
&@_ 0	0	<b>0</b>	0
Audio	Audio	<b>SOUND DUAL</b>	Dual

Originalfernbedienung    Ersatzfernbedienung