



Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|-----------|-------------------------------------------------------------------------------------|----------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | Pic Size |  | Format |
|  | Pic Mode |  | Shift + Format |
|  | Sleep |  | Sleep |
|  | Dual I-II |  | Dual |
|  | S.Mode |  | Shift + Dual |
|  | Still |  | Pause |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |







 









 



 

 

 


 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|------------|---------------------------------------------------------------------------------------|--------------|
|  | 0 |  | 0 |
|  | -/-- |  | Guide |
|  | PRE-CH |  | Pre Ch |
|  | S.Swap |  | I<< |
|  | PIP |  | Options |
|  | P.Input |  | >> |
|  | P.Position |  | >>I |
|  | P.Size |  | Subt |
|  | P.Swap |  | << |
|  | TV |  | TV/R |
|  | PC/HDMI |  | Media |
|  | AV/Sel |  | Smart |
|  | Source |  | AV |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | TTX/On |  | Text |
|  | Mix |  | Shift + Text |



 



 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|-----------|-------------------------------------------------------------------------------------|---------------|
|  | Up |  | Up |
|  | PR+ |  | Ch + |
|  | Down |  | Down |
|  | PR- |  | Ch - |
|  | Right |  | Right |
|  | Vol+ |  | Vol + |
|  | Left |  | Left |
|  | Vol- |  | Vol - |
|  | Enter |  | Ok |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Store |  | Shift + Smart |
|  | Flop/List |  | List |
|  | Hold |  | Stop |
|  | Cancel |  | Back |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|--------|-------------------------------------------------------------------------------------|------------|
|  | Index |  | Info |
|  | Time |  | Shift + AV |
|  | Size |  | Eject |
|  | Reveal |  | D. Menu |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

