



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Audio / Nicam/A2		Dual
	Aspect		Format
	P Mode		Shift + Format
	S Mode		Shift + Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	Display		Info
	Freeze		Shift + Pause
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Sleep		Sleep
	Source		AV
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit



