





 

 
 
 

 









 




 
 
 


 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------------|---|---------|
|  | Power |  | Power |
|  | Band |  | Info |
|  | Function |  | Menu |
|  | Volume + |  | Vol + |
|  | Volume - |  | Vol - |
|  | Smart Operation |  | Smart |
|  | Smart Operation |  | Media |
|  | P.Bass |  | Options |
|  | Surround |  | Dual |
|  | Effect + |  | Ch + |
|  | Effect - |  | Ch - |
|  | S.Image |  | Format |
|  | S.Image Control On/Off |  | Text |
|  | Preset / PGM Call |  | AV |
|  | PGM |  | TV/R |
|  | 1 |  | 1 |
|  | 2 |  | 2 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------|
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 10/0 |  | 0 |
|  | >10 |  | Guide |
|  | CLR |  | Pre Ch |
|  | Disc CD |  | List |
|  | Stop CD |  | Stop |
|  | Pause CD |  | Pause |
|  | Play CD |  | Play |
|  | Random |  | Back |
|  | I<< CD |  | I<< |
|  | >>I CD |  | >>I |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------------|---|---------------|
| | < Deck I | | Red |
| | Deck I > | | Green |
| | << Deck I | | << |
| | Deck I >> | | >> |
| | Stop Deck I | + | Shift + Stop |
| | < Deck II | | Yellow |
| | Deck II > | | Blue |
| | << Deck II | | Left |
| | Deck II >> | | Right |
| | Rec/Pause Deck II | + | Shift + Rec |
| | Stop Deck II | + | Shift + Pause |
| | Wake Up | | Up |
| | Rec | | Rec |
| | Sleep | | Sleep |
| | Snooze | | Ok |



 

 

 




 




 

 

 

 
 
 
 

 

 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|--------|
|  | Power |  | Power |
|  | Tuner Band |  | TV/R |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 10 |  | 0 |
|  | 11 |  | Guide |
|  | 12 |  | Pre Ch |
|  | M.Scan |  | Info |
|  | FM Mono |  | Back |
|  | Mute |  | Mute |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------|---|-------|
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

