 

 















 
 
 















Originalfernbedienung Ersatzfernbedienung

	On / Off		Power
	Mute		Mute / Dimmer
	CD - DVD		Shift + 3
	FM - AM		Shift + 6
	TV		Shift + 1
	CBL - SAT		Shift + 0
	AUX		Shift + 7
	Up / Tune +		Up
	DVD Menu		D.Menu / Top
	Settings		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Guide		Guide / EPG / -/-
	System		Menu / Home
	Down / Tune -		Down
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Track/Chap./CH +		CH+ / Page+
	Track/Chap./CH -		CH- / Page-
	Volume +		Vol+
	Volume -		Vol-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<< Seek		I<< / Preset-
	>>I Seek		>>I / Preset+
	Shuffle / Presets		<< / Tune-
	Repeat / Presets		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle
	Previous		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

