
 



 


 


 
 
 
 
 


 

 

 

 
 










Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Power		Power
	Tuner/Band		Green
	AUX		Red
	Timer/Clock		Pre Ch
	Timer On/Off		Exit
	Program/Set		Menu
	Mo/ST/Rep A-B		Dual
	Sleep		Sleep
	EQ/S.Bass		Options
	Tape Speed		Format
	Power Sound		Media
	Display		Info
	RDS-PTY		TV/R
	Play CD/MP3-CD		Play
	Pause		Pause
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

	I<< CD/MP3-CD		I<<
	>>I CD/MP3-CD		>>I
	Repeat		Text
	Volume+		Vol +
	Volume-		Vol -
	Tuning/Album		Ch +
	Tuning/Album		Ch -
	+10Tuning		Guide
	<< Tape		<<
	>> Tape		>>
	Play Tape		Shift + Play
	Stop Tape		Shift + Stop



CD/MP3-CD