

 


 













 

 






















**Originalfernbedienung    Ersatzfernbedienung**








 
 







 


 

 

 
	On/Standby		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Play Mode		Shift + Play
	Display(Tv Out) iPod		TV/R
	Menu iPod		Menu
	Play/Pause iPod		Pause

**Originalfernbedienung    Ersatzfernbedienung**

	Display CD/USB		Info
	Stop CD		Stop
	Play/Pause CD		Play
	Equalizer		Dual
	X-Bass		Subt
	Memory		Rec
	Clear		Exit
	Clock/Timer		AV
	Sleep		Sleep
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Preset Up		Ch +
	Preset Down		Ch -
	Tuning/Folder Up		>>
	Tuning/Folder		<<
	Up		Up





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Down		Down
	Right/>>I		Right
	Left/I<<<		Left
	Enter		Ok
	iPod		Green
	CD		Yellow
	USB		Blue
	AUX		Red
	Tuner(Band)		Smart
	ASPM RDS		Text
	PTY RDS		3D
	Display RDS		Format

