


 


 
 


 

 
 

 
 
 
 


 






 

 
 

 






 


 



 


 



 



 



 
 






Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		5		5
	Input		AV		6		6
	Up		Up		7		7
	Left		Left		8		8
	Enter		Ok		9		9
	Right		Right		0		0
	Down		Down		Mute		Mute
	TV		TV/R		Info		Info
	Menu		Menu		Sleep		Sleep
	Vol +		Vol +		Last		Pre Ch
	Vol -		Vol -		Sound		Dual
	CH +		Ch +		Hold		Stop
	CH -		Ch -		[≡◇]		Media
	1		1		Text / Mix		Text
	2		2		□		Options
	3		3		Index		Smart
	4		4		[≡...]		Subt





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Size		Format
	Reveal		D. Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

