



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Recall		Back
	TV Menu		Menu
	Source		AV
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Ch. List		Smart
	Exit		Exit
	Vol +		Vol +
	Vol -		Vol -
	Sound		Shift + Dual
	Ch +		Ch +
	Ch -		Ch -
	PIC		Shift + Format
	Text		Text
	Aspect		Format
	Freeze		Pause
	EPG		Guide
	Sleep		Sleep



**Originalfernbedienung Ersatzfernbedienung**

Originalfernbedienung	Ersatzfernbedienung
TV/RADIO	SEARCH TV/R
Info	DISPLAY INFO
FAV	FAV PRE-CH
Red	A
Green	B
Yellow	C
Blue	D
Reveal	APP MEDIA
Hold	[Stop]
List	DISC NAV LIST
Subpage	<<
Size	ZOOM [Eject]
Mix	>>
Subtitle	AD SUBT
Index	PLAY MODE [Play]

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

