












 



 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	A/D/Content Menu		Smart / List
	P+		CH+ / Page+
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	P-		CH- / Page-
	Menu/DVD		Menu / Home
	Exit/Return		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Guide/Top		Guide / EPG / -/-
	Down		Down
	Tv/FAV/Radio/Set		TV/Radio /
	Tv/FAV/Radio/Set		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Picture / Format





Originalfernbedienung Ersatzfernbedienung



	←[/]→	MEDIA DISPLAY	Display / Media
	[i+]/[≡i]	ANGLE INFO	Info / Angle
AUDIO TEXT	Text	GOTO TEXT	Text / Goto
AUDIO TEXT	Audio	LANG I/II AUDIO	Audio / Lang I/II
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
SUBTITLE	Eject	SURROUND	Eject / Surround
CD/I/II	O)I/II	SHIFT + LANG I/II AUDIO	Shift + Audio / Lang I/II
CD/I/II	Stop	HOLD	Stop / Hold
	Play/[≡o]	SLOW	Play / Slow
	II/II>/[▽]	STEP-FREEZE	Pause / Step / Freeze
	I<</[≡?]	PRESET-	I<< / Preset-
	<</[≡+]	TUNE-	<< / Tune-
	>>/[≡◇]	TUNE+	>> / Tune+
	>>I/[O]/[≡X]	PRESET+	>>I / Preset+

Originalfernbedienung Ersatzfernbedienung






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit/Return		Back / Return

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Guide/Top		D.Menu / Top
	Down		Down
	Tv/FAV/Radio/Set		Setup / OPT /
	[<>]		Picture / Format
	<[]>		Display / Media
	[i+]/[≡i]		Info / Angle
	Text		Text / Goto
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Eject		Eject / Surround
	O)/I/II		Shift + Audio / Lang I/II
	Stop		Stop / Hold
	Play/[≡o]		Play / Slow





Originalfernbedienung **Ersatzfernbedienung**





























	/ >/[▼]		Pause / Step / Freeze
	<</[≡?]		<< / Preset-
	<</[≡+]		<< / Tune-
	>>/[≡◇]		>> / Tune+
	>> /[O]/[≡X]		>> / Preset+

Originalfernbedienung **Ersatzfernbedienung**





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	A/D / Content		Smart / List
	P+		CH+ / Page+
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	P-		CH- / Page-
	Menu/DVD		Menu / Home
	Exit/Return		Shift + Back / Return
	Exit/Return		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Guide/Top		D.Menu / Top
	Down		Down
	Tv/FAV/Radio/Set		TV/Radio /
	Tv/FAV/Radio/Set		Setup / OPT /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

	[<>]		Picture / Format
	<[/]>		Display / Media
	[i+]/[≡i]		Info / Angle
	Text		Text / Goto
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Eject		Eject / Surround
	O/I/II		Shift + Audio / Lang I/II
	Stop		Stop / Hold
	Play/[≡o]		Play / Slow
	II/II>/[▽]		Pause / Step / Freeze
	I<</[≡?]		I<< / Preset-
	<</[≡+]		<< / Tune-
	>>/[≡◇]		>> / Tune+
	>>I/[O]/[≡X]		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

