



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|------------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | REC |  | Rec / Rec Mode |
|  | 0 / AV |  | 0 |
|  | 0 / AV |  | AV / Input / RDS |
|  | OPT |  | Setup / OPT / |
|  | Red / << |  | << / Tune- |
|  | Red / << |  | Red / Netflix / Search |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|-----------------------------|
|  | Green / Stop |  | Stop / Hold |
|  | Green / Stop |  | Green / APP / Repeat |
|  | Yellow / |  | Play / Slow |
|  | Yellow / |  | Yellow / YouTube / Repeat |
|  | Blue / Aspect / |  | Picture / Format |
|  | Blue / Aspect / |  | Blue / Prime Video / Random |
|  | Blue / Aspect / |  | >> / Tune+ |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | SFI / EPG |  | Guide / EPG / -/- |
|  | Exit / Recall |  | Exit / Cancel / Clear |
|  | Exit / Recall |  | Back / Return |
|  | Info |  | Info / Angle |
|  | Prog + |  | CH+ / Page+ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------|--|-----------------------|
| | TV / Radio | | TV/Radio / |
| | Vol - | | Vol- |
| | Prog - | | CH- / Page- |
| | Menu | | Menu / Home |
| | Vol + | | Vol+ |
| | TXT / Mix | | Text / Goto |
| | Still | | Pause / Step / Freeze |
| | PIP | | D.Menu / Top |
| | Sound | | Sound / Title |
| | SAT1 | | Shift + 2 |
| | SAT2 | | Shift + 3 |
| | TV | | Shift + 1 |
| | Sleep | | Sleep / Timer |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|------------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | REC |  | Rec / Rec Mode |
|  | 0 / AV |  | AV / Input / RDS |
|  | 0 / AV |  | 0 |
|  | OPT |  | Setup / OPT / |
|  | Red / << |  | << / Tune- |
|  | Red / << |  | Red / Netflix / Search |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|-----------------------------|
|  | Green / Stop |  | Green / APP / Repeat |
|  | Green / Stop |  | Stop / Hold |
|  | Yellow / |  | Play / Slow |
|  | Yellow / |  | Yellow / YouTube / Repeat |
|  | Blue / >> / |  | >> / Tune+ |
|  | Blue / >> / |  | Picture / Format |
|  | Blue / >> / |  | Blue / Prime Video / Random |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | SFI / EPG |  | Guide / EPG / -/- |
|  | Exit / Recall |  | Exit / Cancel / Clear |
|  | Exit / Recall |  | Back / Return |
|  | Info |  | Info / Angle |
|  | Prog + |  | CH+ / Page+ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------|--|-----------------------|
| | TV / Radio | | TV/Radio / |
| | Vol - | | Vol- |
| | Prog - | | CH- / Page- |
| | Menu | | Menu / Home |
| | Vol + | | Vol+ |
| | TXT / Mix | | Text / Goto |
| | Still | | Pause / Step / Freeze |
| | PIP | | D.Menu / Top |
| | Sound | | Sound / Title |
| | SAT1 | | Shift + 2 |
| | SAT2 | | Shift + 3 |
| | TV | | Shift + 1 |
| | Sleep | | Sleep / Timer |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|------------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | REC |  | Rec / Rec Mode |
|  | 0 / AV |  | AV / Input / RDS |
|  | 0 / AV |  | 0 |
|  | OPT |  | Setup / OPT / |
|  | Red / << |  | Red / Netflix / Search |
|  | Red / << |  | << / Tune- |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|-----------------------------|
|  | Green / Stop |  | Green / APP / Repeat |
|  | Green / Stop |  | Stop / Hold |
|  | Yellow / |  | Play / Slow |
|  | Yellow / |  | Yellow / YouTube / Repeat |
|  | Blue / >> / |  | Blue / Prime Video / Random |
|  | Blue / >> / |  | Picture / Format |
|  | Blue / >> / |  | >> / Tune+ |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | SFI / EPG |  | Guide / EPG / -/- |
|  | Exit / Recall |  | Exit / Cancel / Clear |
|  | Exit / Recall |  | Back / Return |
|  | Info |  | Info / Angle |
|  | Prog + |  | CH+ / Page+ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------|
|  | TV / Radio |  | TV/Radio / |
|  | Vol - |  | Vol- |
|  | Prog - |  | CH- / Page- |
|  | Menu |  | Menu / Home |
|  | Vol + |  | Vol+ |
|  | TXT / Mix |  | Text / Goto |
|  | Still |  | Pause / Step / Freeze |
|  | PIP |  | D.Menu / Top |
|  | Sound |  | Sound / Title |
|  | SAT1 |  | Shift + 2 |
|  | SAT2 |  | Shift + 3 |
|  | TV |  | Shift + 1 |
|  | Sleep |  | Sleep / Timer |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

