



 




 


 

 

 


 









 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|--------|
|  | Power |  | Power |
|  | [≡] |  | Text |
|  | 16:9 |  | Format |
|  | Mute |  | Mute |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Digital |  | Smart |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | TV |  | TV/R |
|  | Exit |  | Exit |
|  | Menu |  | Menu |














 

 
 

 
 





 

 



 


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------|
|  | Vol + |  | Vol + |
|  | Vol - |  | Vol - |
|  | P + |  | Ch + |
|  | P - |  | Ch - |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Recall |  | Pre Ch |
|  | CH Guide |  | Guide |
|  | [≡i] / Help |  | Options |




 




 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-------|
|  | Power |  | Power |
|  | Viewlink VCR REC |  | Rec |
|  | Play |  | Play |
|  | << |  | << |
|  | Pause |  | Pause |
|  | >> |  | >> |
|  | Stop |  | Stop |
|  | TV |  | Smart |
|  | Menu |  | Menu |
|  | P + |  | Ch + |
|  | P - |  | Ch - |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|------|
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Input |  | AV |
|  | Lang I-II |  | Dual |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

