



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/RAD / AV		TV/R
	TV/RAD / AV		AV
	FAV / -/--		Pre Ch
	FAV / -/--		Shift + Guide
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Back		Back
	CH+		Ch +
	CH-		Ch -
	EPG		Guide
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	i		Info
	Exit		Exit
	Red / <<		Red
	Red / <<		<<
	Green / Play		Green
	Green / Play		Play





Originalfernbedienung    Ersatzfernbedienung

	Yellow / Stop		Yellow
	Yellow / Stop		Stop
	Blue / >>		Blue
	Blue / >>		>>
	Pause / [...]		Subt
	Pause / [...]		Pause
	✓ / View		Smart
	Rec / SAT		Rec
	Rec / SAT		Media

Originalfernbedienung    Ersatzfernbedienung


