



Originalfernbedienung    Ersatzfernbedienung

|   |       |   |                   |
|---|-------|---|-------------------|
|    | Vol + |    | Vol+              |
|    | P+    |    | CH+ / Page+       |
|    | Vol - |    | Vol-              |
|    | Power |    | Power             |
|    | P-    |    | CH- / Page-       |
|    | Mute  |    | Mute / Dimmer     |
|    | 1     |    | 1                 |
|    | 2     |    | 2                 |
|    | 3     |    | 3                 |
|    | 4     |    | 4                 |
|    | 5     |    | 5                 |
|  | 6     |  | 6                 |
|  | 7     |  | 7                 |
|  | 8     |  | 8                 |
|  | 9     |  | 9                 |
|  | PP    |  | Back / Return     |
|  | PP    |  | Fav / Marker / PC |

Originalfernbedienung    Ersatzfernbedienung

|   |               |   |                   |
|---|---------------|---|-------------------|
|    | 0             |    | 0                 |
|    | Display [ + ] |    | Display / Media   |
|    | [≡]           |    | Text / Goto       |
|    | □             |    | Stop / Hold       |
|    | ?             |    | Smart / List      |
|    | ↕             |    | Zoom / Size       |
|    | - / ψ         |    | I<< / Preset-     |
|    | - / ψ         |    | Left              |
|    | Menu          |    | Menu / Home       |
|    | Menu          |    | OK                |
|    | + / >>I       |    | >>I / Preset+     |
|  | + / >>I       |  | Right             |
|  | ◇◇ / I-II     |  | Audio / Lang I/II |
|  | ◇◇ / I-II     |  | Setup / OPT /     |
|   |               |   |                   |
|   |               |   |                   |
|   |               |   |                   |

