



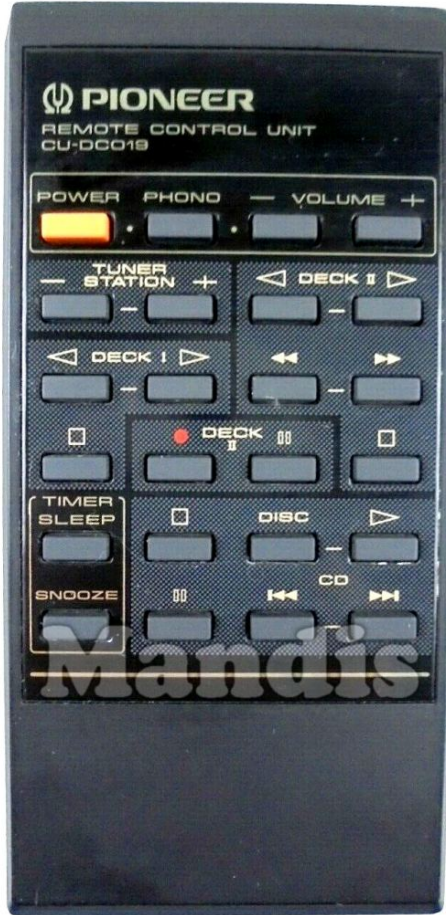 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Phono		2
	Volume -		Vol-
	Volume +		Vol+
	Tuner Station -		Shift + I<< / Preset-
	Tuner Station -		CH- / Page-
	Tuner Station +		Shift + >>I / Preset+
	Tuner Station +		CH+ / Page+
	Deck II Play Reverse		Shift + Left
	Deck II Play		Shift + Right
	Deck I Play		Left
	Deck I Play		Right
	Deck II <<		Shift + Down
	Deck II <<		<< / Tune-
	Deck II >>		Shift + Up
	Deck II >>		>> / Tune+
	Deck I Stop		OK







 

 


 
 

 




 



 


 







Originalfernbedienung Ersatzfernbedienung

	Deck II Rec		Rec / Rec Mode
	Deck II Rec Pause		Shift + Pause / Step /
	Deck II Stop		Shift + OK
	Sleep		Sleep / Timer
	CD Stop		Stop / Hold
	CD Disc		Eject / Surround
	CD Play		Play / Slow
	Snooze		Smart / List
	CD Pause		Pause / Step / Freeze
	CD I<<		I<< / Preset-
	CD >>I		>>I / Preset+




 




 

 

 

 





 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Phono		2
	Volume -		Vol-
	Volume +		Vol+
	Tuner Station -		Shift + I<< / Preset-
	Tuner Station -		CH- / Page-
	Tuner Station +		Shift + >>I / Preset+
	Tuner Station +		CH+ / Page+
	Deck II Play Reverse		Shift + Left
	Deck II Play		Shift + Right
	Deck I Play		Left
	Deck I Play		Right
	Deck II <<<		Shift + Down
	Deck II <<<		<<< / Tune-
	Deck II >>>		Shift + Up
	Deck II >>>		>>> / Tune+
	Deck I Stop		OK

Originalfernbedienung Ersatzfernbedienung

	Deck II Rec		Rec / Rec Mode
	Deck II Rec Pause		Shift + Pause / Step /
	Deck II Stop		Shift + OK
	Sleep		Sleep / Timer
	CD Stop		Stop / Hold
	CD Disc		Eject / Surround
	CD Play		Play / Slow
	Snooze		Smart / List
	CD Pause		Pause / Step / Freeze
	CD I<<<		I<<< / Preset-
	CD >>>I		>>>I / Preset+

