














 





Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
<<		<< / Tune-
>>		>> / Tune+
DVD Menu		D.Menu / Top
Settings		Setup / OPT /
Seek Left		Left
Enter		OK
Seek Right		Right
Vol+		Vol+
AM		Smart / List
Track/Preset/Chapter+		CH+ / Page+
Vol-		Vol-
FM		Display / Media

Originalfernbedienung Ersatzfernbedienung

Track/Preset/Chapter-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Repeat		Green / APP / Repeat
Video1		Yellow / YouTube / Repeat
Shuffle		Blue / Prime Video / Random
Tune Down		Shift + << /
Tune Up		Shift + >> /
DVD Menu		Shift + D.Menu / Top Menu



