
 



 
 







 


 


Originalfernbedienung Ersatzfernbedienung

|         |   |       |
|---------|---|-------|
| POWER   |    | Power |
| MUTE    |    | Mute  |
| DISPLAY |    | Info  |
| 1       |    | 1     |
| 2       |    | 2     |
| 3       |    | 3     |
| 4       |    | 4     |
| 5       |    | 5     |
| 6       |    | 6     |
| 7       |    | 7     |
| 8       |   | 8     |
| 9       |  | 9     |
| 0       |  | 0     |
| --      |  | Guide |
| RETURN  |  | Back  |
| VOL+    |  | Vol + |
| VOL-    |  | Vol - |

Originalfernbedienung Ersatzfernbedienung

|            |   |               |
|------------|---|---------------|
| ^ CH+      |    | Up            |
| v CH-      |    | Down          |
| <          |    | Left          |
| >          |    | Right         |
| PLAY/ENTER |    | Ok            |
| MENU       |    | Menu          |
|            |    | Pause         |
| <<         |    | <<            |
| >>         |    | >>            |
| <<         |   | <<            |
| >>         |  | >>            |
| EDJECT     |  | Eject         |
| STOP       |  | Stop          |
| ZOOM       |  | Shift + Eject |
| SUBTITLE   |  | Subt          |
| SLOW       |  | Rec           |
| INPUT      |  | AV            |



