

 

 


 



 



 


 

 
 

 



 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|--------|-------------------------------------------------------------------------------------|-------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Lang |  | Dual |
|  | TXT |  | Text |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Source |  | AV |














 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|-------------|---------------------------------------------------------------------------------------|---------------|
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Home |  | Smart |
|  | G |  | Guide |
|  | i |  | Info |
|  | Back |  | Back |
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Netflix |  | Media |
|  | YouTube |  | Shift + Media |
|  | *1 |  | Format |
|  | Prime Video |  | Shift + Smart |
|  | Red |  | Red |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|-----------------------------------------------------------------------------------|--------|-----------------------------------------------------------------------------------|--------|
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | << |  | << |
|  | Pause |  | Pause |
|  | >> |  | >> |
|  | Rec |  | Rec |
|  | Play |  | Play |
|  | Stop |  | Stop |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

