




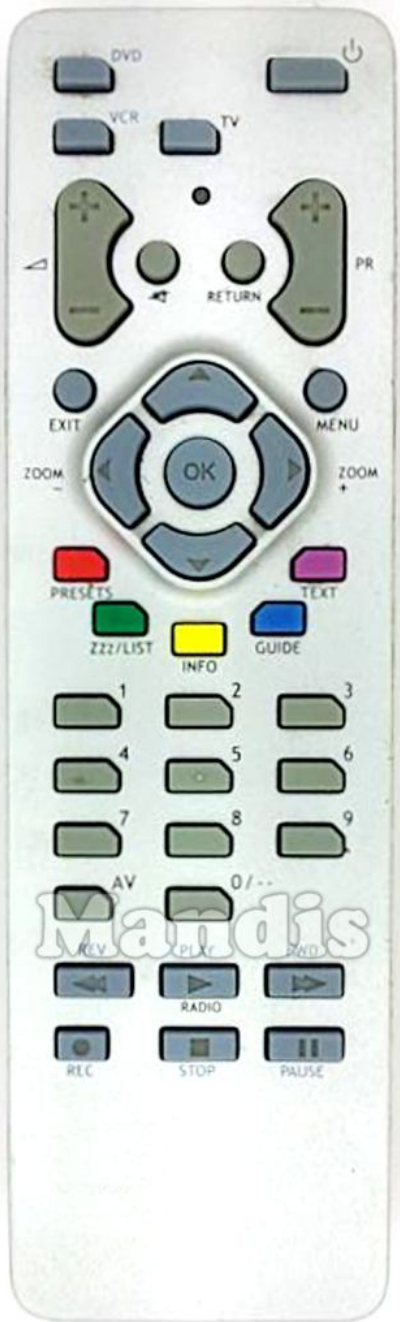 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	OK		Ok
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Presets		Dual
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Info		Info
	Blue		Blue
	Violet		Media
	Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/--		0
	AV		AV
	Stop		Stop


 
 





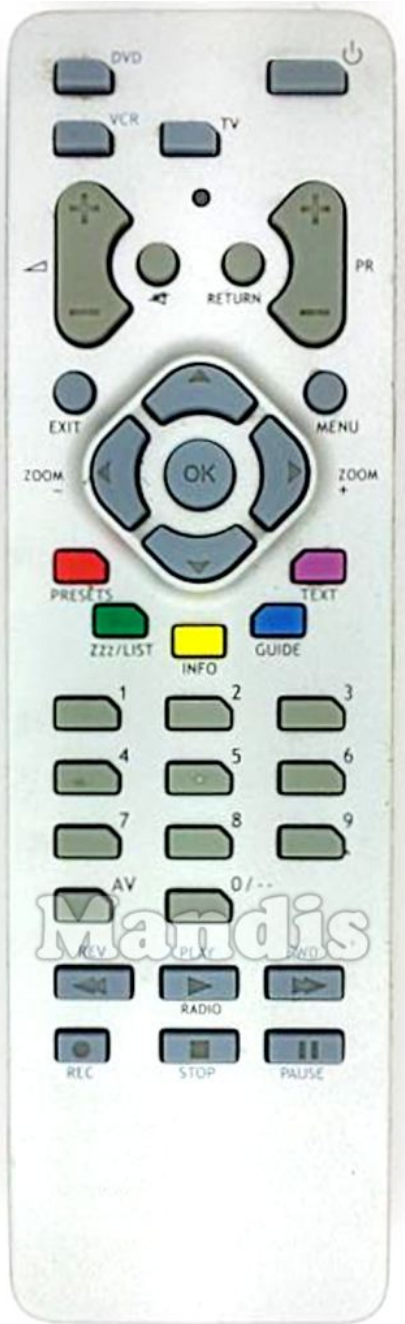 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	Menu		Menu
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Presets		Dual
	Green		Green


Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Yellow		Yellow
	Blue		Blue
	Violet		Media
	Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/--		0
	AV		AV
	Play		Play





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	Return		Back
	Exit		Exit
	Menu		Menu
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Presets		Dual
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Yellow		Yellow
	Blue		Blue
	Violet		Media
	Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/--		0
	AV		AV
	Rec		Rec



