







 

 









 

 



 

 











 



 
 






 



 
 



 
 

 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	TV/AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Return		Back
	Eject		Eject
	Play		Play
	Pause		Pause

**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Sys Menu		D. Menu
	Display		Shift + Info
	Picture		Format
	Sound		Shift + Dual
	Timer		Shift + AV
	Nicam/A2		Options
	Lan/Prog-		Ch -
	Zoom/Prog+		Ch +



