 
 

 
 


 




Originalfernbedienung Ersatzfernbedienung

|   |                |   |                           |
|---|----------------|---|---------------------------|
|    | Standby / On   |    | Power                     |
|    | BD             |    | Shift + 5                 |
|    | DVD            |    | Shift + 2                 |
|    | DVR / BDR      |    | Shift + 7                 |
|    | HDMI           |    | Shift + 0                 |
|    | TV             |    | Shift + 1                 |
|    | CD             |    | Shift + 3                 |
|    | NET            |    | Shift + 9                 |
|    | ADPT           |    | Shift + Guide / EPG / -/- |
|   | iPod / USB     |   | Shift + 8                 |
|  | SAT / CBL      |  | Shift + Fav / Marker / PC |
|  | MHL            |  | Shift + 4                 |
|  | TUNER          |  | Shift + 6                 |
|  | Input Select ↶ |  | CH- / Page-               |
|  | Input Select ↷ |  | CH+ / Page+               |
|  | i / Status     |  | Info / Angle              |
|  | Volume+        |  | Vol+                      |

Originalfernbedienung Ersatzfernbedienung

|   |                |   |                               |
|---|----------------|---|-------------------------------|
|    | Volume-        |    | Vol-                          |
|    | Mute           |    | Mute / Dimmer                 |
|    | Audio          |    | Audio / Lang I/II             |
|    | Up             |    | Up                            |
|    | Video          |    | Picture / Format              |
|    | Tools Menu     |    | Setup / OPT /                 |
|    | Left           |    | Left                          |
|    | Enter          |    | OK                            |
|    | Right          |    | Right                         |
|   | Home Menu      |   | Menu / Home                   |
|  | iPod Ctrl.     |  | D.Menu / Top                  |
|  | Down           |  | Down                          |
|  | Return         |  | Back / Return                 |
|  | Features PHASE |  | Red / Netflix / Search        |
|  | Features ECO   |  | Yellow / YouTube / Repeat     |
|  | MPX            |  | Shift + Pause / Step / Freeze |
|  | Pause          |  | Pause / Step / Freeze         |





Originalfernbedienung Ersatzfernbedienung

|   |              |   |                       |
|---|--------------|---|-----------------------|
|    | BAND         |    | Shift + Play /        |
|    | Play         |    | Play / Slow           |
|    | PTY          |    | Shift + Stop /        |
|    | Stop         |    | Stop / Hold           |
|    | Preset -     |    | Shift + I<< / Preset- |
|    | I<<          |    | I<< / Preset-         |
|    | Preset+      |    | Shift + >>I / Preset+ |
|    | >>I          |    | >>I / Preset+         |
|    | Tune-        |    | Shift + << /          |
|    | <<           |    | << / Tune-            |
|   | Tune+        |   | Shift + >> /          |
|  | >>           |  | >> / Tune+            |
|  | Auto / ALC / |  | Subtitle / EQ         |
|  | 1            |  | 1                     |
|  | Standard     |  | Smart / List          |
|  | 2            |  | 2                     |
|  | Adv. Surr.   |  | Eject / Surround      |



 



 

Originalfernbedienung Ersatzfernbedienung

|   |             |   |                           |
|---|-------------|---|---------------------------|
|    | 3           |    | 3                         |
|    | + Favorite  |    | Fav / Marker / PC         |
|    | Audio / THX |    | Sound / Title             |
|    | 4           |    | 4                         |
|    | Signal Sel. |    | TV/Radio /                |
|    | MCACC       |    | Zoom / Size               |
|    | 5           |    | 5                         |
|    | 6           |    | 6                         |
|    | CH. Level   |    | Text / Goto               |
|    | Disp / Auto |    | Display / Media           |
|   | 7           |   | 7                         |
|  | Speakers    |  | Shift + Audio / Lang I/II |
|  | Dimmer      |  | Shift + Mute / Dimmer     |
|  | 8           |  | 8                         |
|  | 9           |  | 9                         |
|  | Sleep       |  | Sleep / Timer             |
|  | Repeat      |  | Green / APP / Repeat      |





Originalfernbedienung Ersatzfernbedienung

|   |          |   |                             |
|---|----------|---|-----------------------------|
|  | HDMI Out |  | AV / Input / RDS            |
|  | 0        |  | 0                           |
|  | Class    |  | Exit / Cancel / Clear       |
|  | Shuffle  |  | Blue / Prime Video / Random |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |





 


 
 

 




**Originalfernbedienung    Ersatzfernbedienung**

|   |                |   |                           |
|---|----------------|---|---------------------------|
|    | Standby / On   |    | Power                     |
|    | BD             |    | Shift + 5                 |
|    | DVD            |    | Shift + 2                 |
|    | DVR / BDR      |    | Shift + 7                 |
|    | HDMI           |    | Shift + 0                 |
|    | TV             |    | Shift + 1                 |
|    | CD             |    | Shift + 3                 |
|    | NET            |    | Shift + 9                 |
|    | ADPT           |    | Shift + Guide / EPG / -/- |
|   | iPod / USB     |   | Shift + 8                 |
|  | SAT / CBL      |  | Shift + Fav / Marker / PC |
|  | MHL            |  | Shift + 4                 |
|  | TUNER          |  | Shift + 6                 |
|  | Input Select ↻ |  | CH- / Page-               |
|  | Input Select ↻ |  | CH+ / Page+               |
|  | i / Status     |  | Info / Angle              |
|  | Volume+        |  | Vol+                      |

**Originalfernbedienung    Ersatzfernbedienung**

|   |                |   |                           |
|---|----------------|---|---------------------------|
|    | Volume-        |    | Vol-                      |
|    | Mute           |    | Mute / Dimmer             |
|    | Audio          |    | Audio / Lang I/II         |
|    | Up             |    | Up                        |
|    | Video          |    | Picture / Format          |
|    | Tools Menu     |    | Setup / OPT /             |
|    | Left           |    | Left                      |
|    | Enter          |    | OK                        |
|    | Right          |    | Right                     |
|   | Home Menu      |   | Menu / Home               |
|  | iPod Ctrl.     |  | D.Menu / Top              |
|  | Down           |  | Down                      |
|  | Return         |  | Back / Return             |
|  | Features PHASE |  | Red / Netflix / Search    |
|  | Features ECO   |  | Yellow / YouTube / Repeat |
|  | MPX            |  | Shift + Pause / Step /    |
|  | Pause          |  | Pause / Step / Freeze     |





**Originalfernbedienung    Ersatzfernbedienung**

|  |              |   |                       |
|--|--------------|---|-----------------------|
|  | BAND         | + | Shift + Play /        |
|  | Play         |   | Play / Slow           |
|  | PTY          | + | Shift + Stop /        |
|  | Stop         |   | Stop / Hold           |
|  | Preset -     | + | Shift + I<< / Preset- |
|  | I<<          |   | I<< / Preset-         |
|  | Preset+      | + | Shift + >>I / Preset+ |
|  | >>I          |   | >>I / Preset+         |
|  | Tune-        | + | Shift + << /          |
|  | <<           |   | << / Tune-            |
|  | Tune+        | + | Shift + >> /          |
|  | >>           |   | >> / Tune+            |
|  | Auto / ALC / |   | Subtitle / EQ         |
|  | 1            |   | 1                     |
|  | Standard     |   | Smart / List          |
|  | 2            |   | 2                     |
|  | Adv. Surr.   |   | Eject / Surround      |

 



 



**Originalfernbedienung    Ersatzfernbedienung**

|  |             |   |                           |
|--|-------------|---|---------------------------|
|  | 3           |   | 3                         |
|  | + Favorite  |   | Fav / Marker / PC         |
|  | Audio / THX |   | Sound / Title             |
|  | 4           |   | 4                         |
|  | Signal Sel. |   | TV/Radio /                |
|  | MCACC       |   | Zoom / Size               |
|  | 5           |   | 5                         |
|  | 6           |   | 6                         |
|  | CH. Level   |   | Text / Goto               |
|  | Disp / Auto |   | Display / Media           |
|  | 7           |   | 7                         |
|  | Speakers    | + | Shift + Audio / Lang I/II |
|  | Dimmer      | + | Shift + Mute / Dimmer     |
|  | 8           |   | 8                         |
|  | 9           |   | 9                         |
|  | Sleep       |   | Sleep / Timer             |
|  | Repeat      |   | Green / APP / Repeat      |





Originalfernbedienung Ersatzfernbedienung

|   |          |   |                             |
|---|----------|---|-----------------------------|
|  | HDMI Out |  | AV / Input / RDS            |
|  | 0        |  | 0                           |
|  | Class    |  | Exit / Cancel / Clear       |
|  | Shuffle  |  | Blue / Prime Video / Random |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |
|   |          |   |                             |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

