


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Smart		Smart
	Mute		Mute

**Originalfernbedienung Ersatzfernbedienung**

	Prog+		Ch +
	Prog-		Ch -
	Menu		Menu
	List		List
	Back		Back
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Audio		Dual
	Sub		Subt



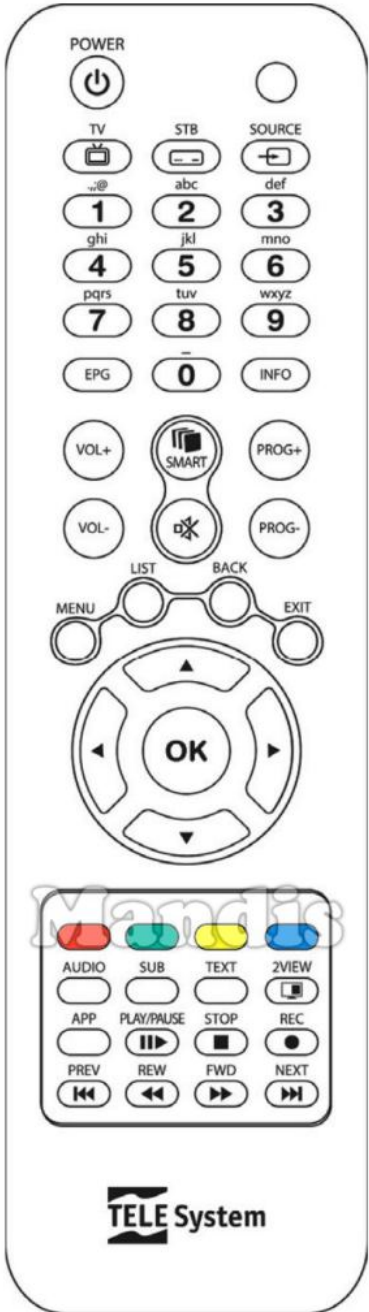

Originalfernbedienung Ersatzfernbedienung

	Text		Text
	2View		TV/R
	APP		Media
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Rec		Rec
	I<< PREV		I<<
	>>I NEXT		>>I
	<< REW		<<
	>> FWD		>>

Originalfernbedienung Ersatzfernbedienung