

 


 






 

 
 

 
 
 

 
 


 







 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Zoom		Eject
	Subt		Subt
	Audio		Dual
	Rec		Rec
	--		Shift + Guide
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	<<		<<
	>>		>>




 




 



 

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>I		>>I
	Menu		Menu
	FAV		Pre Ch
	Up / PR+		Up
	Down / PR-		Down
	Right / Vol+		Right
	Left / Vol-		Left
	OK / List		Ok
	OK / List		List
	Exit		Exit
	EPG		Guide
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Media		Media
	Page+		Ch +





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	Page-
	Ch -
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Recall
	TV / Radio

Originalfernbedienung Ersatzfernbedienung

