



 

 

 


 
 

 
 






 
 
 

 
 
 

 
 







**Originalfernbedienung    Ersatzfernbedienung**

	DVD / TV / AV		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute
	Repeat / TV/Radio		TV/R
	Repeat / TV/Radio	 + 	Shift + Text
	Exit		Exit
	Up / CH+		Up
	Up / CH+		Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	Pg Up	 + 	Shift + Ch +
	Pg Dn	 + 	Shift + Ch -
	Title		Smart
	Info		Info
	Goto / FAV		Pre Ch
	Audio		Dual
	Sub-T		Subt
	Zoom / TTX		Text
	Zoom / TTX		Eject
	Setup		Options




**Originalfernbedienung    Ersatzfernbedienung**

	Menu / EPG		Menu
	Menu / EPG		Guide
	USB		Media
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Copy/Delete / Rec		Rec
	Red / <<		Red
	Red / <<		<<
	Green / >>		Green
	Green / >>		>>
	Yellow / I<<		Yellow
	Yellow / I<<		I<<
	Blue / >>I		>>I
	Blue / >>I		Blue

**Originalfernbedienung    Ersatzfernbedienung**