


 


 
 
 
 

 

 
 



 



 
 









Originalfernbedienung Ersatzfernbedienung

	Power AMP		Power
	Open/Close		Eject
	Power CD	 + 	Shift + Power
	Pure Direct		Guide
	Coaxial		4
	Optical		5
	Line 1		1
	Line 2		2
	Line 3		3
	Tuner		6
	Phono		7
	CD		8
	Band		Up
	<< Tuning		Ch -
	Tuning >>		Ch +
	Memory		Ok
	< Preset		Left

Originalfernbedienung Ersatzfernbedienung

	Preset >		Right
	<<		<<
	Disc Skip		Smart
	>>		>>
	Pause		Pause
	Stop		Stop
	Play		Play
	>>		>>
	<<		<<
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

