


 
 






 







 

 



 

 
 
 

 


 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|----------------|
|  | Power |  | Power |
|  | Eject iPod |  +  | Shift + Pre Ch |
|  | Eject CD |  | Pre Ch |
|  | Sleep |  | Sleep |
|  | Timer/Play |  | Blue |
|  | Clock/Timer |  +  | Shift + AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10 |  | Guide |


 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|---------------|
|  | Del |  | 3D |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Program |  +  | Shift + Sleep |
|  | Repeat |  | Text |
|  | Play Mode |  +  | Shift + Play |
|  | Radio |  | TV/R |
|  | AUX |  | AV |
|  | Play/Pause CD |  | Play |
|  | Play/Pause iPod |  | Pause |
|  | >>/>>I |  | >> |
|  | <</I<< |  | << |
|  | Stop |  | Stop |
|  | Re-Master |  | Smart |
|  | D.Bass |  | Media |
|  | Display/Dimmer |  | Info |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------|
|  | Surround |  | Dual |
|  | Preset EQ |  | Format |
|  | iPod Menu |  | Menu |
|  | Bass/Treble |  | Back |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Auto Off |  | Exit |
|  | Tune Mode |  | Subt |
|  | FM Mode |  | List |
|  | Input Level |  | Options |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

