



 



 
 
 





 

 





 








 
 




 
 















 


 
 








**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Back
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

**Originalfernbedienung    Ersatzfernbedienung**

	CH List		List
	P+ / Page+		Ch +
	P- / Page-		Ch -
	Smart Hub		Smart
	Menu		Menu
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Return		Shift + Back
	Exit		Exit
	Red		Red
	Green		Green





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Yellow		Yellow				
	Blue		Blue				
	Rec		Rec				
	3D		3D				
	AD/Subt.		Subt				
	Stop		Stop				
	<</I<<		<<				
	<</I<<		I<<				
	Play		Play				
	Pause		Pause				
	>>/>>I		>>I				
	>>/>>I		>>				

