 



 
 
 
 






 




 






 
 
 
 
 



 
 
 

 
 
 
 


 


 

 
 
 

 
 
 





 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	HDD		Media
	DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Subtitle		Subt
	Prog+		Ch +

Originalfernbedienung Ersatzfernbedienung

	Prog-		Ch -
	Input Select		AV
	TV / DVD		TV/R
	Top Menu		Shift + Menu
	Menu		Menu
	System Menu		D. Menu
	Chapter Mark		Guide
	Mark Erase		Pre Ch
	Title List		List
	Timer		Sleep
	Display		Info
	Timer List		Mute
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down

 

 





 




Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Options		Options
	I<<		I<<
	>>I		>>I
	••		Vol -
	•→		Vol +
	<< / <II / <I		<<
	Play		Play
	>> / I> / II>		>>
	Time / Text		Text
	Pause		Pause
	Stop		Stop
	Rec		Rec
	Rec Stop		Shift + Stop
	Rec Mode		Shift + Rec
	Synchro Rec		Red
	TV Power		Shift + Power

Originalfernbedienung Ersatzfernbedienung

	TV Input		Shift + AV
	TV Prog+		Shift + Ch +
	TV Vol+		Shift + Vol +
	TV Vol-		Shift + Vol -
	TV Prog-		Shift + Ch -

