








 













 




 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Auto		Smart
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Aspect		3D
	Audio		Dual
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep
	FAV		Pre Ch


 
 




Originalfernbedienung Ersatzfernbedienung

	FAV-		Shift + Ch -
	FAV+		Shift + Ch +
	EPG		Guide
	Text		Text
	Hold		Options
	Tv/Radio		TV/R
	Subtitle		Subt
	Index		List
	Reveal		D. Menu
	Subpage		Eject
	Media		Media
	Size		Format
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	I<<		I<<
	>>I		>>I
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

