

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Rec		Rec
	Browser		Media
	Timer		Shift + AV
	Copy		Green
	Guide		Guide
	AV / TV		AV
	Teletext		Text
	EPG		Shift + Guide
	Record List		List
	Vol-		Vol -
	Vol+		Vol +
	Up / CH+		Ch +
	Up / CH+		Up
	Down / CH-		Ch -
	Down / CH-		Down

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	Right		Right
	Return		Back
	Setup		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Go To		Smart
	TV System		TV/R





Originalfernbedienung Ersatzfernbedienung

	Option		Options
	Play		Play
	Stop		Stop
	Step	+	Shift + Pause
	Pause		Pause
	I<< Prev		I<<
	>>I Next		>>I
	<< FR		<<
	>> FF		>>
	Subtitle		Subt
	Display		Info
	Audio		Dual
	Zoom		Eject
	Time Shift		Yellow
	Repeat	+	Shift + Text
	Select	+	Shift + Ok
	Confirm		Red

Originalfernbedienung Ersatzfernbedienung