


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject / Surround
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Clear		Exit / Cancel / Clear
	4		4
	5		5
	6		6
	Program		TV/Radio /
	7		7
	8		8
	9		9
	Display		Display / Media
	0		0
	+10		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Goto		Text / Goto
	Title		Sound / Title
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter / Play		Play / Slow
	Enter / Play		OK
	Right		Right
	Setup		Setup / OPT /
	Down		Down
	T.E.		Smart / List
	Zoom		Zoom / Size
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Angle		Info / Angle
	Vol+		Vol+
	P/N		D.Menu / Top



