








 





 

 

 


 
 



 









Originalfernbedienung Ersatzfernbedienung

|   |               |  |            |
|---|---------------|--|------------|
|    | Power         |     | Power      |
|    | DVD           |     | Smart      |
|    | Zoom          |     | Eject      |
|    | Angle         |     | Format     |
|    | QLTY          |     | 3D         |
|    | Edit          |     | Options    |
|    | LIB           |     | List       |
|    | Audio         |     | Dual       |
|   | Subtitle      |    | Subt       |
|  | Light         |  | Shift + Ok |
|  | Red / Again   |   | Red        |
|  | Green /       |   | Green      |
|  | Yellow / Info |   | Yellow     |
|  | Yellow / Info |   | Info       |
|  | Blue / Guide  |   | Blue       |
|  | Blue / Guide  |   | Guide      |
|  | Up            |   | Up         |


 


 

 
 


Originalfernbedienung Ersatzfernbedienung

|   |                  |   |       |
|---|------------------|---|-------|
|    | Left             |    | Left  |
|    | OK               |    | Ok    |
|    | Right            |    | Right |
|    | Down             |    | Down  |
|    | Clear / Exit     |    | Exit  |
|    | Menu             |    | Menu  |
|    | Live             |    | Media |
|    | Vol+             |    | Vol + |
|   | Vol-             |   | Vol - |
|  | Mute             |  | Mute  |
|  | Go Back / Return |  | Back  |
|  | PR+ / >>I        |  | Ch +  |
|  | PR+ / >>I        |  | >>I   |
|  | PR- / I<<<       |  | Ch -  |
|  | PR- / I<<<       |  | I<<<  |
|  | 1                |  | 1     |
|  | 2                |  | 2     |





Originalfernbedienung Ersatzfernbedienung

|   |            |   |       |
|---|------------|---|-------|
|    | 3          |    | 3     |
|    | 4          |    | 4     |
|    | 5          |    | 5     |
|    | 6          |    | 6     |
|    | 7          |    | 7     |
|    | 8          |    | 8     |
|    | 9          |    | 9     |
|    | 0          |    | 0     |
|    | AV         |    | AV    |
|    | TV / Video |    | TV/R  |
|  | << REV     |  | <<    |
|  | >> FWD     |  | >>    |
|  | Play       |  | Play  |
|  | Rec        |  | Rec   |
|  | Stop       |  | Stop  |
|  | Pause      |  | Pause |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

