 
 

 


 
 






 



 

 
 
 


 
 
 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / R		TV/R
	AV		AV
	Menu		Menu
	Text		Text
	Back		Back

 


 
 

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	CH-		Ch -
	CH+		Ch +
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	APP		Media
	SUB		Subt
	List		List





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------	-----------------------	---------------------

	i		Info
	Audio		Dual
	EPG		Guide

