




















**Originalfernbedienung Ersatzfernbedienung**

Audio		Audio / Lang I/II
AFFICHE		Power
Open / Close - OUVRE/FERME		Eject / Surround
Angle		Info / Angle
1		1
Subtitle - SOUS TITRE		Subtitle / EQ
Search -		Red / Netflix / Search
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Menu		Menu / Home

**Originalfernbedienung Ersatzfernbedienung**

PRG		TV/Radio /
CLR - EFF		Exit / Cancel / Clear
Up		Up
Left		Left
OK		OK
Title - TITRE		Sound / Title
Right		Right
Down		Down
Vol+		Vol+
MODE		Smart / List
Vol-		Vol-
ZOOM		Zoom / Size
A-B		Yellow / YouTube / Repeat
STOP		Stop / Hold
MARK -		Fav / Marker / PC
Return -		Back / Return
Setup - REGL		Setup / OPT /



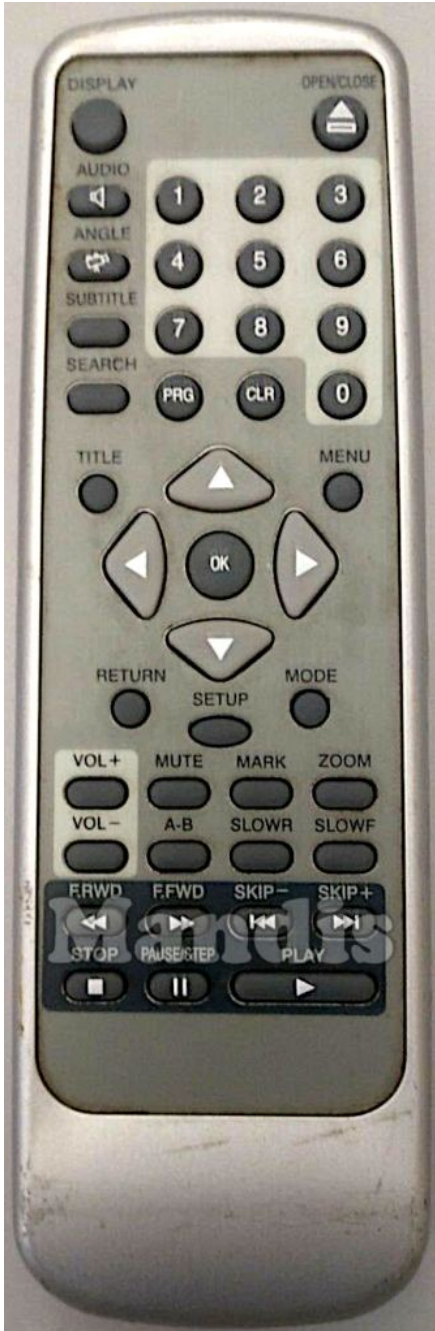

Originalfernbedienung Ersatzfernbedienung

F.Rwd - AR.RAPID	TUNE- ◀	<< / Tune-
F.Fwd - AV.RAPID	TUNE+ ▶	>> / Tune+
Mute -	DIMMER MUTE	Mute / Dimmer
Slow R -	CH PAGE -	CH- / Page-
Slow F -	CH PAGE +	CH+ / Page+
Skip+ / SAUT+	PRESET+ ▶▶	>>I / Preset+
Skip- / SAUT-	PRESET- ◀◀	I<< / Preset-
PAUSE/IMAGE	STEP - FREEZE 	Pause / Step / Freeze
Play - LECTURE	SLOW ▶	Play / Slow

Originalfernbedienung Ersatzfernbedienung