







 

 

 
 

 




Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / Radio		TV/R
	←PR		Back
	EPG		Guide
	Menu		Menu
	Up / PR+		Up

Originalfernbedienung    Ersatzfernbedienung

	Up / PR+		Ch +
	Down / PR-		Down
	Down / PR-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK / List		Ok
	OK / List		List
	Info		Info
	Exit		Exit
	Red / Audio		Red
	Red / Audio		Dual
	Green / TXT		Green
	Green / TXT		Text
	Yellow / Subtitle		Yellow
	Yellow / Subtitle		Subt





Originalfernbedienung Ersatzfernbedienung

	Blue / L/R		Blue
	Page+		Shift + Ch +
	Page-		Shift + Ch -
	Pause		Pause
	::		Smart
	FAV		Pre Ch
	-		Media
	PAL / NTSC		Format
	Record		Rec
	Play		Play
	Stop		Stop
	TV / AV		AV
	<< Fast		<<
	Fast >>		>>
	< Seek		I<<
	Seek >		>>I

Originalfernbedienung Ersatzfernbedienung