






 

 



 
 
 

 

 

 

 

 

 
 
 










 



 

 



 

 









 








Originalfernbedienung Ersatzfernbedienung








 



 

 

 



 



 
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+] / [?]		Info
	[≡]		Text
	Google Play		Media
	Netflix		Shift + Media
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Guide		Guide
	Rec List		List
	Source		AV
	*		Menu
	Back		Back
	Home		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Tv		TV/R





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Recall		Pre Ch				
	CH+		Ch +				
	CH-		Ch -				
	Audio		Dual				
	[...]		Subt				
	Help		Options				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Pause		Pause				
	Exit		Exit				

