





 




 

 




 




 





 







 

 


 
 


 
 

 




 







 
 



 




Originalfernbedienung Ersatzfernbedienung





 

 






 


 
 

 

 
 

 

 
 


 
 

 
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	AV		AV
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	TV/DTV		TV/R
	Menu		Menu
	Top Menu/[≡]		Shift + Menu
	Back		Back
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	<</F.T/L		<<
	Play/?/TV/Radio		Play
	>>/[-]/Guide		>>





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	(i)		Info
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Top Menu	 + 	Shift + Menu
	Back		Back
	↑/[+]		Pre Ch
	↓/[]		Guide
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Pause		Pause



