



Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off	+	Shift + Power
	Mute		Mute / Dimmer
	AVR	+	Shift + AV / Input / RDS
	DVD	+	Shift + 2
	> DVD	+	Shift + >> /
	VID1		Smart / List
	HDMI1	+	Shift + 1
	Tape	+	Shift + 5
	CD	+	Shift + 3
	VID2		Display / Media
	HDMI2	+	Shift + 6
	AUX	+	Shift + 7
	HDMI4	+	Shift + 4
	HDMI3	+	Shift + 8
	Sleep		Sleep / Timer
	Preset ▲		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung


















	Test	+	Shift + Text /
	AM/FM		TV/Radio /
	Vol+		Vol+
	Preset ▼		CH- / Page-
	OSD	+	Shift + Smart / List
	Vol-		Vol-
	CH./[≡?]		Info / Angle
	Up		Up
	SPKR/Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Digital/[≡X]		Setup / OPT /
	Down		Down
	Delay/Prev. CH.		Exit / Cancel / Clear
	1		1
	2		2
























**Originalfernbedienung    Ersatzfernbedienung**

Power On		Power
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
<<		<< / Tune-
>>		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Night		Sleep / Timer
Direct		D.Menu / Top
[≡]		Text / Goto
RDS		AV / Input / RDS
SPKR/Menu		Menu / Home
Up		Up
Left		Left
OK		OK
Right		Right

**Originalfernbedienung    Ersatzfernbedienung**


Clear		Exit / Cancel / Clear
Down		Down
Vol+		Vol+
Mem/[≡◇]		Smart / List
Vol-		Vol-
CH./[≡?]		Display / Media
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Power Off		Shift + Power
















 
 






Originalfernbedienung Ersatzfernbedienung

Power On		Power
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Rec VCR		Rec / Rec Mode
<<		<< / Tune-
>>		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Power (On /Off)		Eject / Surround
Direct		D.Menu / Top
RDS		AV / Input / RDS
SPKR/Menue		Menu / Home
Delay/Prev. CH		Exit / Cancel / Clear
Vol+ VCR		Vol+
Mem/[≡◆]		Smart / List
PR+ VCR		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

Vol- VCR		Vol-
PR- VCR		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Preset ▲/Blue		Blue / Prime Video / Random
Power Off		Shift + Power
Play VCR		Shift + Play /
Stop VCR		Shift + Stop /
<< VCR		Shift + << /

Tune-





