 

 
 
 
 
 

 
 


 
 
 
 



 
 
 
 
 
 
 





 
 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	USB/My Media		Media
	Input		AV
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Mark		Guide
	Key's Up		>>
	Key's Down		<<
	Sleep		Sleep
	Picture		Format
	3D		3D
	L/R		TV/R
	Ratio		List
	Blank		Text

**Originalfernbedienung Ersatzfernbedienung**

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Page Up		Ch +
	Page Down		Ch -
	Settings		Options
	Still		Smart
	Q.Menu		D. Menu
	Back		Back
	Auto		Pre Ch
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Help		Subt
	Sound		Dual

