





































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PR List		Smart / List
	0		0
	Recall		Back / Return
	Vol+		Vol+
	P.Mode		Picture / Format
	S.Mode		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Menu		Menu / Home
	Aspect		Shift + Picture / Format
	Sleep		Sleep / Timer
	Info/Display		Info / Angle
	I/II/Nicam		Shift + Audio / Lang I/II
	DVD/USB		Shift + 2
	Text		Text / Goto







Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	Size		Zoom / Size
	Play/Pause/Index		Play / Slow
	Stop/Reveal		Stop / Hold
	Step/Subpage		Pause / Step / Freeze
	Open/Close/Hol		Eject / Surround
	I<</FAV		I<< / Preset-
	>>ITv/Radio		Shift + >> /
	<</Audio		<< / Tune-
	>>/EPG		>> / Tune+
	Red/Prog		Red / Netflix / Search
	Green/Zoom		Green / APP / Repeat
	Yellow/Title		Yellow / YouTube / Repeat
	Blue/DVD-Setup		Blue / Prime Video / Random
	DVD-Menu		D.Menu / Top
	Repeat		Shift + Green / APP / Repeat
	A-B		Shift + Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	DVD-Lang		Audio / Lang I/II
---	----------	---	-------------------

