


 
 
 
 



 

 

 





 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	/--		Guide
	Preview		Pre Ch
	Sound		Dual
	Picture		Shift + Format
	Aspect		Format

**Originalfernbedienung    Ersatzfernbedienung**

	Still		Pause
	S.Mode		Shift + Dual
	Sleep		Sleep
	Volume+		Vol +
	Volume-		Vol -
	Channel+		Ch +
	Channel-		Ch -
	PIP On/Off		Smart
	Source		Shift + AV
	Size		Eject
	Swap		Back
	Up / P-CH +		Up
	Down / P-CH -		Down
	Right		Right
	Left		Left
	Menu		Menu
	Menu		Ok







**Originalfernbedienung Ersatzfernbedienung**

	Exit		Exit
	TV / AV		AV
	Info		Info
	Wiper		Media
	PC Auto		Options
	TTX On/Off		Text
	TTX / Mix		Shift + Text
	Index		Shift + Info
	List / FLOF		Shift + Smart
	Store		TV/R
	Hold		Stop
	Reveal		Shift + Subt
	Subpage		Subt
	Size		Shift + Eject
	Red		Red
	Green		Green
	Yellow		Yellow

**Originalfernbedienung Ersatzfernbedienung**

	Blue		Blue

