


 



 



















 








 










**Originalfernbedienung    Ersatzfernbedienung**


	Power DVD		Power
	Rec Check		Rec
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide
	CH+ / Tracking/V-Lock +		Ch +
	CH- / Tracking/V-Lock -		Ch -
	AV / Input Select		AV
	Output DVD		Media

**Originalfernbedienung    Ersatzfernbedienung**

	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause / Step		Pause
	Play		Play
	Top Menu		D. Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Back
	Timer		Shift + AV
	Play Mode		Shift + Play
	Position		Pre Ch



Memory

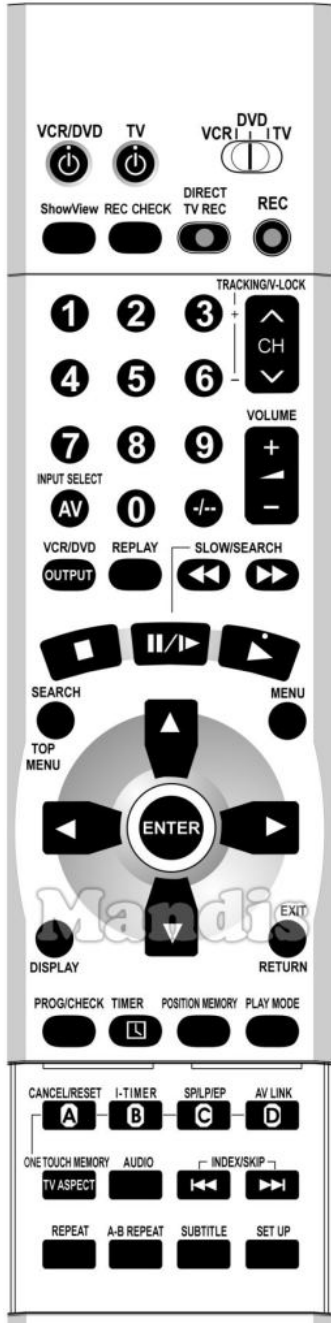


**Originalfernbedienung** **Ersatzfernbedienung**

	Replay		List
	A / Cancel/Reset		Red
	B / I-Timer		Green
	C / SP/LP/EP		Yellow
	D / AV Link		Blue
	One Touch		Smart
	Audio		Dual
	I<< Index/Skip		I<<
	Index/Skip >>I		>>I
	Repeat		Text
	A-B Repeat		Shift + Text
	Subtitle		Subt
	Setup		Options

**Originalfernbedienung** **Ersatzfernbedienung**

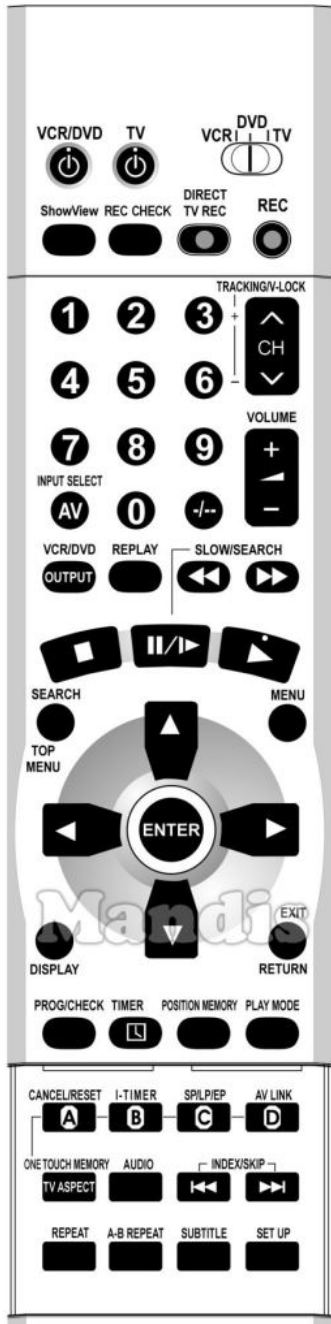


**Originalfernbedienung    Ersatzfernbedienung**

	Power VCR		Power
	ShowView		Smart
	Rec Check		Options
	Direct TV Rec	+	Shift + Rec
	Rec		Rec
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide
	CH+ / Tracking/V-Lock +		Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	CH- / Tracking/V-Lock -		Ch -
	AV / Input Select		AV
	Output VCR		Media
	Replay		List
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause / Step		Pause
	Play		Play
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Exit		Exit



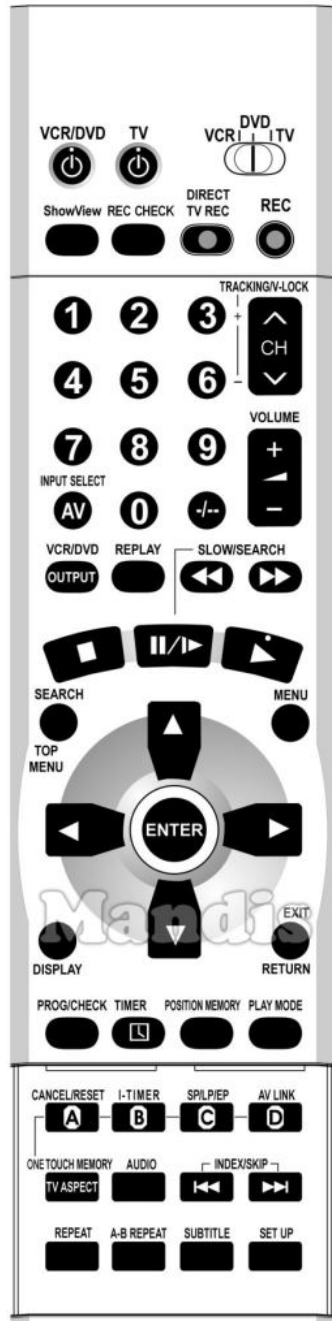

Originalfernbedienung Ersatzfernbedienung

	Prog / Check		Sleep
	Audio		Dual
	I<< Index		I<<
	Index >>I		>>I

Originalfernbedienung Ersatzfernbedienung