






 





 


 




 
 

 
 

 


 

 
 

 

 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Standby	 Power	 Book.J	 Shift + 3D
 Mute	 Mute	 R.Skip	 I<<
 1	 1	 REW	 <<
 2	 2	 FWD	 >>
 3	 3	 F.Skip	 >>I
 4	 4	 Rec	 Rec
 5	 5	 Stop	 Stop
 6	 6	 Play	 Play
 7	 7	 Pause	 Pause
 8	 8	 Menu	 Menu
 9	 9	 Exit	 Exit
 0	 0	 Info	 Info
 F.List	 Media	 Back	 Back
 RES	 Smart	 Up	 Up
 Repeat	 Text	 Left	 Left
 Capture	 Format	 OK	 Ok
 Book.M	 3D	 Right	 Right



